

## Installation

*DriLyner™ system is unsuitable for use in areas subject to continuously damp or humid conditions.*




Determine the highest spots on the wall and plumb position to the ceiling and floor. Transfer this dimension to the room corners. Mark wall with vertical lines at every 1.20 m interval.

Mix ProStick™ Dri-Wall Adhesive with clean water according to the recommended ratio on the bag side.



Trowel apply a continuous fillet of ProStick™ Dri-Wall Adhesive to the perimeter of the wall through the vertical lines. Form dab 50 mm to 80 mm wide and about 250 mm long.

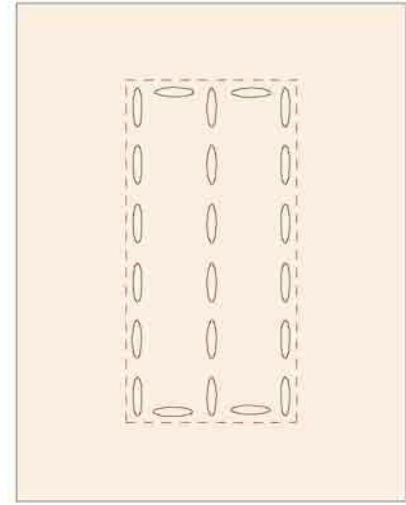

Position dabs of adhesive in three vertical rows. Apply six dabs a row to receive the first board. Ensure that the dabs adjacent to a board joint are approximately 50 mm in from the edge to avoid bridging the joint. Apply a continuous band of adhesive at ceiling and skirting levels.



Position the first board, grey face against the dabs, with the bottom edge resting on a small piece of GypBoard™.

Tap the board back firmly using a straightedge until it aligns with the ceiling and floor lines.



Finish board joints, hide screw heads and allow to set/dry. Remove imperfections ready for further decoration.